


# BEDIENUNGSANWEISUNG

 Instructions for use

## ETV6800.1

---

Cód: 893290




# Contents

Features .....	2	Digital TV Menu System .....	13
Accessories .....	2	Channel List.....	13
Introduction.....	2	Navigating the Entire Channel List .....	13
Preparation.....	2	Moving the channels in the channel list.....	13
Safety Precautions .....	3	Deleting the Channels in the Channel List .....	13
Power Source .....	3	Renaming channels.....	14
Power Cord.....	3	Adding Locks to Channels.....	14
Moisture and Water .....	3	Setting Favourites.....	14
Cleaning.....	3	Program Guide .....	14
Heat and Flames .....	3	Timers.....	14
Lightning .....	3	Common Interface .....	15
Replacement Parts .....	3	TV Setup.....	15
Servicing.....	3	Setup .....	15
Waste Disposal.....	3	Configuration .....	15
Information for Users in European Union		Time Settings(**).....	16
Countries .....	3	Language Settings.....	17
Disconnecting the Device .....	3	Language Settings.....	18
Disconnecting the Device .....	3	Installation.....	18
Headphone Volume .....	4	Video Playback (optional).....	20
Installation.....	4	Analogue TV Menu System.....	21
LCD Screen .....	4	Picture Menu.....	21
Warning .....	4	Sound Menu .....	21
Overview of the Remote Control .....	5	Feature Menu .....	22
LCD TV and Operating Buttons.....	6	Install Menu .....	23
Viewing the Connections- Back Connectors .....	6	Install Menu in AV Modes .....	24
Viewing the Connections - Side Connectors .....	7	Program Table .....	24
Aerial Connection .....	7	Source Menu .....	25
Power Connection .....	8	PC Mode Menu System.....	25
Using Side USB Input.....	8	PC Position Menu .....	25
USB Memory Connection .....	8	Displaying TV Information .....	26
Connecting the LCD TV to a PC.....	8	Mute Function.....	26
Connecting to a DVD Player.....	8	Picture Mode Selection.....	26
Using Side AV Connectors .....	9	Freezing Picture .....	26
Using Other Connectors .....	9	Zoom Modes.....	26
Connecting Other Equipment via Scart .....	9	Teletext .....	27
Inserting Batteries in the Remote Control Handset .....	9	Tips .....	28
Switching the TV On/Off .....	9	Appendix A: PC Input Typical Display Modes.....	29
To Switch the TV On .....	9	Appendix B: AV and HDMI Signal Compatibility	
To Switch the TV Off.....	10	(Input Signal Types).....	29
Input Selection.....	10	Appendix C: Supported File Formats for	
Basic Operations .....	10	USB Mode .....	30
Operation with the Buttons on the TV.....	10	Specifications .....	31
Operation with the Remote Control .....	10	Transmission Standards:.....	31
Initial Settings .....	11		
Electronic Programme Guide (EPG).....	12		
Programme Options.....	12		
Analogue Teletext .....	13		
Widescreen.....	13		


## Features

- Remote controlled colour LCD TV.
- Fully integrated digital TV (DVB-T - MPEG2) (DVB-T-MPEG4).
- HDMI connectors for digital video and audio. This connection is also designed to accept high definition signals.
- USB input.
- 200 programmes from VHF, UHF (analogue).
- 1000 programmes for digital mode (IDTV).
- Integrated tuner TNT HD, MPEG 2 / MPEG 4 compatible.
- OSD menu system.
- Scart socket for external devices (such as video, video games, audio set, etc.).
- Stereo sound system. (German+Nicam)
- Teletext, fastext, TOP text.
- Headphone connection.
- Automatic programming system.
- Forward or backward manual tuning.
- Sleep timer.
- Child lock.
- Automatic sound mute when no transmission.
- NTSC playback.
- AVL (Automatic Volume Limiting).
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to standby mode.
- PLL (Frequency Search).
- PC input.
- Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7.
- Audio line out.
- Game Mode (optional)

## Accessories

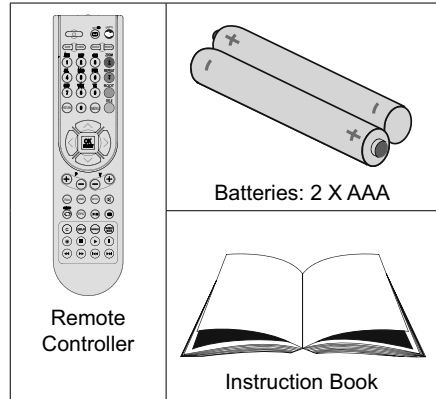

## Introduction


Thank you for choosing this product. This manual will guide you for the proper operation of your TV. Before operating the TV, please read this manual thoroughly. 

Please do keep this manual in a safe place for future references.

## Preparation

For ventilation, leave a free space of at least 10 cm all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

Use this device in moderate climates.

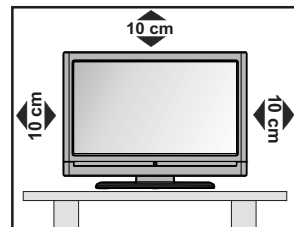

## Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

### Power Source

The TV set should be operated only from a 220-240 VAC, 50 Hz outlet. Ensure that you select the correct voltage setting for your convenience.

### Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be replaced, it should be done by qualified personnel.

### Moisture and Water

Do not use this device in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this device to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

### Cleaning

Before cleaning, unplug the TV set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

### Ventilation

The slots and openings on the TV set are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

 
### Heat and Flames

The set should not be placed near to open flames and sources of intense heat such as an electric heater. Ensure that no open flame sources, such as lighted candles, are placed on top of the TV. Batteries should not be exposed to excessive heat such as sunshine, fire or the like.



### Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.



### Replacement Parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock or other hazards.

### Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.



### Waste Disposal

Instructions for waste disposal:

- Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.
- Batteries, including those which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environment friendly manner. Find out about the legal regulations which apply in your area.
- Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

### Information for Users in European Union Countries

This symbol on the product or on its packaging means that your electrical and electronic device should be disposed at the end of its service life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.



### Disconnecting the Device

The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable.

### Disconnecting the Device

The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable.

## Headphone Volume

Excessive sound pressure from earphones and headphones can cause hearing loss.



## Installation


To prevent injury, this device must be securely attached to the wall in accordance with the installation instructions when mounted to the wall (if the option is available).

## LCD Screen

The LCD panel is a very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product.

## Warning

Do not leave your TV in standby or operating mode when you leave your house.

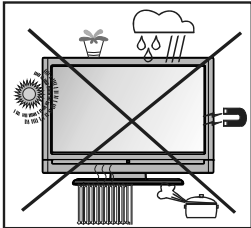

## Licence Notification

### LICENSE NOTICE

*Manufactured under license from Dolby Laboratories.*

### TRADEMARK ACKNOWLEDGMENT

*"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.*


**When you use the wall mount kit (optional) with the LCD TV, we would definitely recommend to plug all your cables into the back of the LCD before mounting to the wall.**

## Overview of the Remote Control



1. Standby
2. Image size
3. Sleep timer
4. Numeric buttons
5. Return / Exit (in DTV mode) / Index page (in TXT mode)
6. Cursor up / Page up (in TXT mode)
7. Cursor left
8. Programme up (Page down in DTV mode)
9. Programme down (Page up in DTV mode)
10. Mono-Stereo / Dual I-II / Current language (in DTV mode) (\*)
11. Previous Programme / Swap
12. Electronic programme guide (in DTV mode)
13. Info / Reveal (in TXT mode)
14. Picture mode selection
15. Source selection
16. Red / Sound menu / Change channel list (in DTV mode)
17. Green / Picture / Subtitle on-off (in DTV mode) (\*)
18. Yellow / Feature / Current language (in DTV mode) (\*)
19. Menu on-off
20. Blue / Install menu / Selects DVB-T channels (in DTV mode)
21. OK / Channel list (in DTV mode) / Hold (in TXT mode)
22. Cursor right / Subpage (in TXT mode)
23. Cursor down / Page down (in TXT mode)
24. Volume up
25. Volume down
26. Mute
27. Teletext / Mix
28. Subtitle on-off (in DTV mode) / TXT Subtitle
29. FAV (\*) (Favourite Selection) (in DTV mode)
30. Media Browser playback buttons. (in DTV mode)

(\*) Only for EU country options.

Note: Buttons that are not indicated with a number on the remote control illustration are not functional in TV mode.


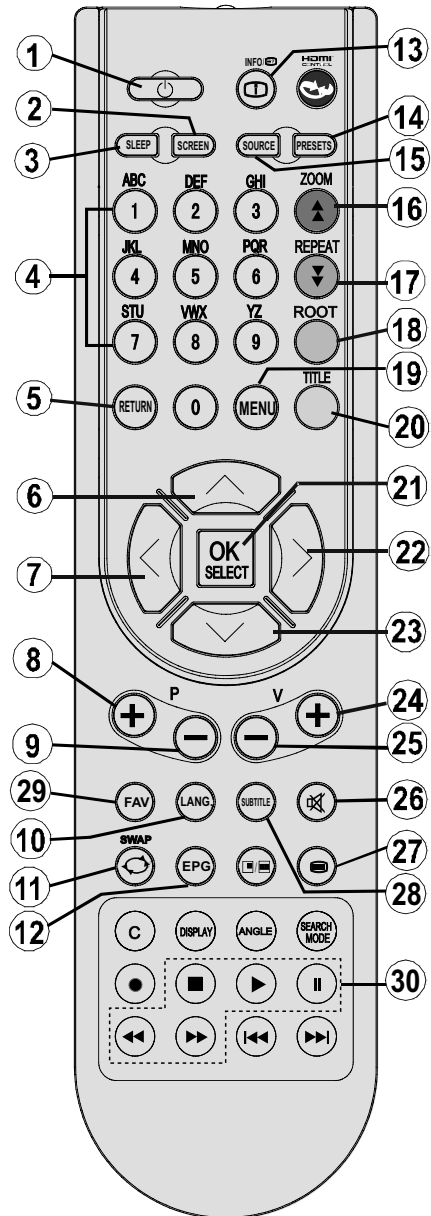


## LCD TV and Operating Buttons

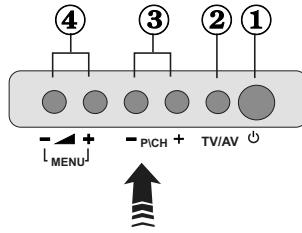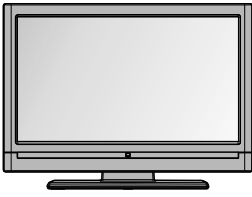


1. Standby button
2. TV/AV button
3. Programme Up/Down buttons
4. Volume Up/Down buttons

**Note:** Press “ / ” buttons at the same time to view main menu.

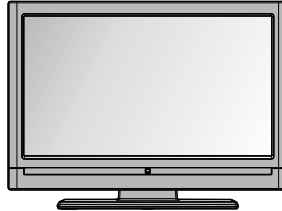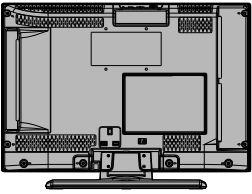

## Viewing the Connections- Back Connectors

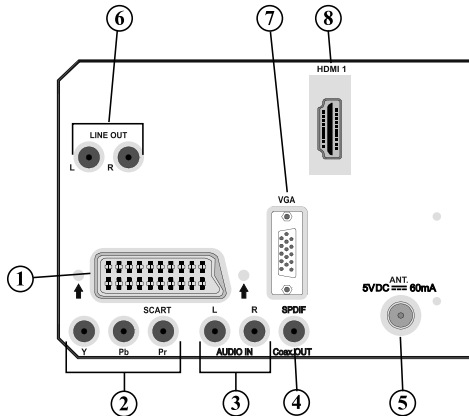


1. **SCART socket** inputs or outputs for external devices.  
Connect the **SCART** cable between **SCART** socket on TV and **SCART** socket on your external device (such as a decoder, a VCR or a DVD player).  
**Note:** If an external device is connected via the **SCART** socket, the TV will automatically switch to AV mode.
2. **Component Video Inputs (YpBPr)** are used for connecting component video.  
You can connect the component video and audio sockets with a device that has component output. Connect the component video cables between the **COMPONENT VIDEO INPUTS** on the TV and the component video outputs of your device. While connecting, be sure that the letters on your TV, “Y”, “Pb”, “Pr” correspond with your device’s connectors.
3. **PC/YPbPr Audio Inputs** are used for connecting audio signals of a PC or a device that connects to the TV via YPbPr.  
Connect the PC audio cable between the **AUDIO INPUTS** on the TV and audio output of your PC to enable PC audio.  
Connect the audio cable between **AUDIO INPUTS** on the TV and audio outputs of your device to enable component audio.

4. **S/PDIF Out** outputs digital audio signals of the currently watched source. Use an **S/PDIF coaxial cable** to transfer audio signals to a device that has S/PDIF input. *You should also set SPDIF Out option in the Sound Menu as On.*
5. **RF Input** connects to an antenna or a cable. Note that if you use a decoder or a media recorder, you should connect the aerial cable through the television with an appropriate antenna cable, as shown in the illustration in the following pages.
6. **Audio Line Outs** output audio signals to an external device such as an optional sound system. To connect the external speakers to your TV, use **AUDIO LINE OUTS** of the TV with an audio cable. *Note: Line out feature cannot be used while in HDMI source. You can use SPDIF instead.*
7. **PC Input** is for connecting a personal computer to the TV set. Connect the PC cable between the **PC INPUT** on the TV and the PC output on your PC.
8. **HDMI 1:** HDMI input  
**HDMI Inputs** are for connecting a device that has an **HDMI** socket. Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI sockets or Component Socket. These sockets can accept either 480i, 480p, 576p, 576i, 720p, 1080i, 1080p signals. No sound connection is needed for an HDMI to HDMI connection.


## Viewing the Connections - Side Connectors

1. CI Slot is used for inserting a CI card. A CI card allows you to view all the channels that you subscribe to. For more information, see "Conditional Access" section.
2. USB Input (functional in DTV mode only)
3. Headphone jack is used for connecting an external headphone to the system. Connect to the HEADPHONE jack to listen to the TV from headphones (optional).
4. Video Input is used for connecting video signals of external devices. Connect the video cable between the VIDEO IN socket on the TV and the VIDEO OUT jack on your device.
5. Audio Inputs are used for connecting audio signals of external devices. Connect the audio cable between the AUDIO INPUTS on the TV and the AUDIO OUTPUT jacks on your device.  
*Note: If you connect a device to the TV via the VIDEO INPUT, you should also connect your device with an audio cable to the AUDIO INPUTS of the TV to enable audio.*

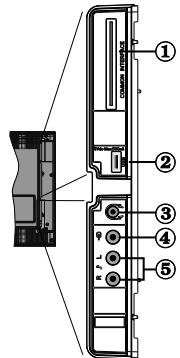

## Aerial Connection

- Connect the aerial or cable TV plug to the **AERIAL INPUT** socket located at the rear of the TV.

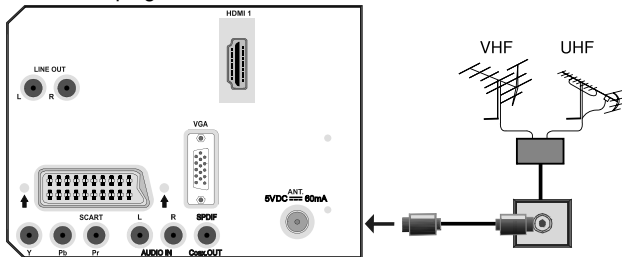



## Power Connection

**IMPORTANT:** The TV set is designed to operate on 220-240V AC, 50 Hz.


- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.
- Plug the power cable to the mains socket outlet.

## Using Side USB Input

- You can connect USB devices to your TV by using the USB input of the TV. This feature allows you to display/play JPG, video (optional) and MP3 files stored in a USB stick.
- It is possible that certain types of USB devices (e.g. MP3 Players) may not be compatible with this TV.
- You may back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible for any file damage or data loss.
- Do not pull out USB module while playing a file.

**CAUTION: Quickly plugging and unplugging USB devices, is a very hazardous operation. Especially, do not repeatedly quickly plug and unplug the drive. This may cause physical damage to the USB player and especially the USB device itself.**

SIDE VIEW      USB MEMORY

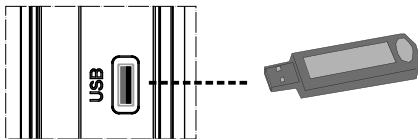

## USB Memory Connection



- Plug your USB device to the USB input of the TV.

**IMPORTANT:** The TV supports only FAT32 disk formatting. NTFS format is not supported.

## Connecting the LCD TV to a PC

For displaying your computer's screen image on your LCD TV, you can connect your computer to the TV set.

- Power off both computer and display before making any connections.
- Use 15-pin D-sub display cable to connect a PC to the LCD TV.
- When the connection is made, switch to PC source. See "Input selection" section.
- Set the resolution that suits your viewing requirements. Resolution information can be found in the appendix parts.

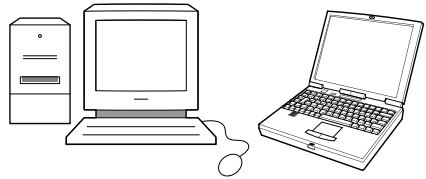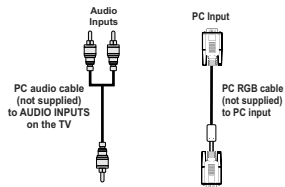


## Connecting to a DVD Player

If you want to connect a DVD player to your LCD TV, you can use connectors of the TV set. DVD players may have different connectors. Please refer to your DVD player's instruction book for additional information. Power off both the TV and the device before making any connections.

**Note:** Cables shown in the illustration are not supplied.

- If your DVD player has an HDMI socket, you can connect via HDMI. When you connect to DVD player as illustrated below, switch to HDMI source. See, "Input Selection" section.
- Most DVD players are connected through COMPONENT SOCKETS. Use a component video cable to connect video input. For enabling audio, use a component audio cable as illustrated below. When the connection is made, switch to YPbPr source. See, "Input selection" section.
- You may also connect through the SCART socket. Use a SCART cable as shown below.


**Note:** These three methods of connection perform the same function but in different levels of quality. It is not necessary to connect by all three methods.

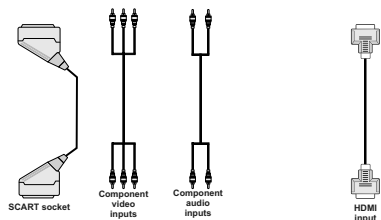

## Using Side AV Connectors

You can connect a range of optional equipment to your LCD TV. Possible connections are shown below. Note that cables shown in the illustration are not supplied.


- For connecting a camcorder, connect to the VIDEO IN socket and the AUDIO SOCKETS. For selecting the related source, see the section "Input selection" in the following parts.
- To listen the TV sound from headphones, connect to the HEADPHONE jack of the TV.

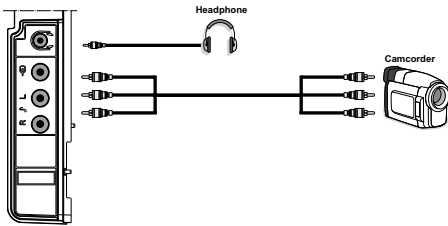

## Using Other Connectors

You can connect a range of optional equipment to your LCD TV. Possible connections are shown below. Note that cables shown in the illustration are not supplied.

- To connect external speakers, use an audio cable. Do not reverse the AUDIO LEFT and AUDIO RIGHT jacks. Turn on the LCD TV and external speaker set after all connections are made. Refer to your speaker set's manual for further queries.
- For connecting a device that has SPDIF support, use an appropriate SPDIF cable to enable sound connection. You should also set SPDIF Out option in the Sound menu as On.

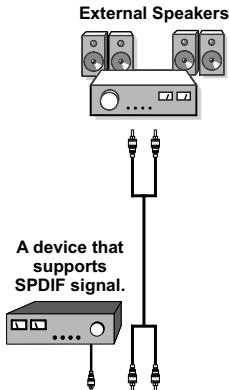


## Connecting Other Equipment via Scart

Most devices support SCART connection. You can connect a DVD recorder, a VCR or a decoder to your LCD TV by using the SCART socket. Note that cables shown in the illustration are not supplied.


Power off both the TV and the devices before making any connections.

For more information, refer to your device's own instruction book.

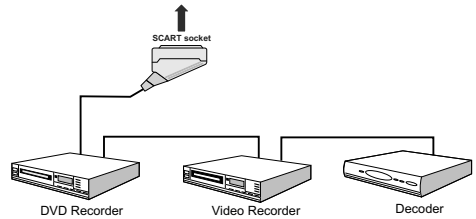

## Inserting Batteries in the Remote Control Handset

- Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.
- Insert two AAA/R3 or equivalent type batteries inside. Place the batteries in the right directions and replace the battery cover.

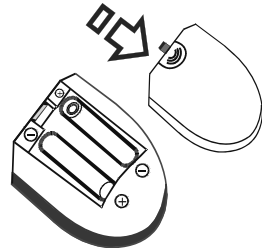

**Note:** Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

Remote range is approximately 7m/23ft.

## Switching the TV On/Off

### To Switch the TV On

- Connect the power cord to the 220-240V AC 50 Hz.
- Press STANDBY switch. Then the standby LED lights up.
- To switch on the TV from standby mode either:

- Press the “**⏻**” button, **P+ / P-** or a numeric button on the remote control.

- Press the **-P/CH** or **P/CH+** button on the TV. The TV will then switch on.

**Note:** If you switch on your TV via **PROGRAMME UP/DOWN** buttons on the remote control or on the TV set, the programme that you were watching last will be reselected.

By either method the TV will switch on.

## To Switch the TV Off

- Press the “**⏻**” button on the remote control or press the **STANDBY** switch, so the TV will switch to standby mode.

- **To power down the TV completely, unplug the power cord from the mains socket.**

**Note:** When the TV is switched to standby mode, standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active.

## Input Selection

Once you have connected external systems to your TV, you can switch to different input sources.

- Press **SOURCE** button on your remote control for directly changing sources.

or,

- Select “**Source**” option from the main menu by using “**◀**” or “**▶**” button. Use then “**▼**” or “**▲**” button to highlight an input and press “**▶**” button to select.

**Note:** You can mark desired source options by pressing the **OK** button. Therefore, when **SOURCE** button is pressed, only the marked source options will be available (except for the TV source).



## Basic Operations

You can operate your TV using both the remote control and onset buttons.

## Operation with the Buttons on the TV

### Volume Setting

- Press “**–** **▲**” button to decrease volume or **▲** **+** button to increase volume, so a volume level scale (slider) will be displayed on the screen.

### Programme Selection

- Press “**P/CH +**” button to select the next programme or “**P/CH -**” button to select the previous programme.

### Viewing Main Menu

- Press “**–** **▲**” / “**▲** **+**” buttons at the same time to view main menu. In the Main menu select sub-menu using “**P/CH -**” or “**P/CH +**” buttons and enter the sub-menu using “**–** **▲**” or “**▲** **+**” buttons. To learn the usage of the menus, refer to the menu system sections.

### AV Mode

- Press the “**TV/AV**” button in the control panel on the TV to switch between AV modes.

## Operation with the Remote Control

- The remote control of your TV is designed to control all the functions of the model you selected. The functions will be described in accordance with the menu system of your TV.
- Functions of the menu system are described in the following sections.

### Volume Setting

- Press **V+** button to increase the volume. Press **V-** button to decrease the volume. A volume level scale (slider) will be displayed on the screen.

### Programme Selection (Previous or Next Programme)

- Press “**P -**” button to select the previous programme.
- Press “**P +**” button to select the next programme.

### Programme Selection (Direct Access)

- Press numeric buttons on the remote control to select programmes between 0 and 9. The TV will switch to the selected programme. To select programmes between 10 - 999 (for IDTV) or 10-199 (for analogue), press the numeric buttons consecutively. The limit of the delay time is 3 seconds.
- Press directly the programme number to reselect single digit programmes.


## Initial Settings

When the TV is turned on for the first time, the menu for the language selection appears on the screen. The message **“Welcome please select your language!”** is displayed in all language options sequentially in the OSD.

By pressing the **“▼”** or **“▲”** buttons highlight the language you want to set and press **OK** button.

You can get information about the menu usage by pressing **INFO** button. Press **INFO** button again to exit the help menu.

After then, **“First time installation”** OSD will appear on the screen. By pressing **“◀”** or **“▶”** buttons, select the country you want to set and press **OK** button.

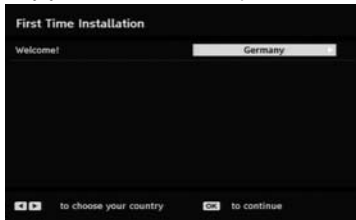

*Note: Country selection will not be available for UK. Press **OK** to continue.*

 
After then, the active antenna selection OSD appears on the screen:

By pressing **“◀”** or **“▶”** buttons, set active antenna mode as on or off.



If an active antenna is connected to your TV, you can select this option as On. Antenna power should be “Off” when standard antenna is used instead of the active antenna. See **“Configuration Menu”** in the following sections for more information.


Press **OK** button on the remote control to continue and the following message will be displayed on the screen:




- To select the “Yes” or “No” option, highlight the item by using **“◀”** or **“▶”** buttons and press **OK** button.

The IDTV will automatically tune to the transmission channels, searching for digital terrestrial TV broadcasts and displaying the names of channels found. This process will take a few minutes. To cancel searching, you can press **MENU** button at any time during the


process. The following OSD will be displayed during the automatic search:

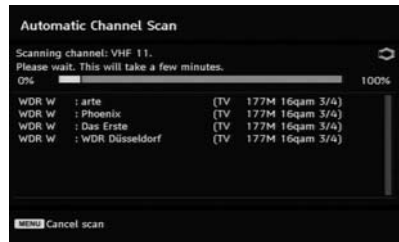

 After Automatic Search is completed, the following message will be displayed, asking for sorting option. If you select **“YES”**, programme list will be sorted according to LCN (logical channel number). Select **“NO”** for using frequency sort. (This feature is available for only Germany, Austria and Italy country option)




 After this operation, the following menu will appear on the screen, asking for analog channel search:



To search for analogue channels, select “Yes”. TV switches to the analogue TV mode. A menu will be displayed to search for analogue channels.

Set **Language** item by pressing **“◀”** or **“▶”** button. Press **“▼”** or **“▲”** button to highlight **Country** item and then use **“◀”** or **“▶”** to set. Press **“▼”** or **“▲”** button to highlight **TXT Language**. Set TXT Language by using **“◀”** or **“▶”** button. To cancel, press the **BLUE** button. When finished, press **OK** or **RED** button to continue and the following OSD will be displayed:

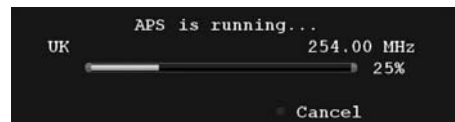

After **automatic tuning** is finalized, a programme list will appear on the screen. In the programme list you will see the programme numbers and names assigned to the programmes.

If you do not accept the locations and/or the names of the programmes, you can change them in Program table. For details, see the section, “Program table”.

## General Operation

 
Press the **“SOURCE”** button on the remote control and select **DTV/USB** to switch the TV set to digital

terrestrial television broadcasting..Information Banner

- Whenever you change the channel using the **P +** or **P -** button or numeric buttons, the TV displays the broadcast picture along with an information banner at the bottom of the screen. This will remain on the screen for approximately a few seconds.
- The information banner can also be displayed by pressing the **INFO** button at any time while watching the TV. Pressing **INFO** button again removes the banner.



If the selected channel is locked, you must enter the correct four digit key to view the channel. In this case, a dialog box asking for the lock key will be displayed:



## Electronic Programme Guide (EPG)

Some, but not all, channels send information about the current and next events. Please note that event information is updated automatically. If there are no event information data available for channels, EPG will be displayed with blanks.

- Press **EPG** button to view the **EPG** menu.
- Press “▼” or “▲” buttons to navigate through channels.
- Press “◀” or “▶” buttons to navigate through the programme list.



**RED button (Shrink):** makes the info boxes smaller.

**GREEN button (Expand):** makes the info boxes larger.

**YELLOW button (Prev. Day):** displays the programmes of previous day.

**BLUE button (Next day):** displays the programmes of the next day.


**INFO (Details):** displays the programmes in detail.

**OK (View / Timer):** shows the highlighted channel / sets the reminder for future programmes.

**Numeric buttons (Jump):** go to preferred channel directly via numeric buttons.

↻: Jump to current broadcast.

**0 (SEARCH):** activates “Guide Search” window

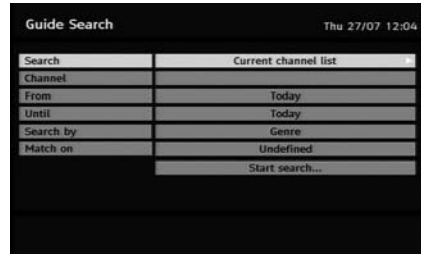

Press “0” button to view Guide Search menu. Using this feature, you can search the programme guide database in accordance with the genre selected or with name match.

## Programme Options

In EPG menu, press the **OK** button to enter the “Programme Options” menu.



Using this option, you can switch to the selected channel.

## Over Air Download

To ensure that your IDTV always has the most up-to-date information, please ensure that, after use, it is set to standby mode. At 3 A.M. each day, the IDTV automatically searches for any updates which may be broadcast and will download this to your IDTV automatically. This operation will normally take approximately 30 minutes.

## Displaying Subtitles

With digital terrestrial broadcasting (DVB-T), some programmes are broadcast with subtitles.

**Note:** You can enable subtitles by pressing the **CC** (For UK\*\*) or **GREEN** (for EU\*) button.

## Digital Teletext (For UK only\*\*)

- Press the TELETEXT (**TT**) button.
- The digital teletext information appears.
- Operate it with the coloured buttons, “▼” / “▲” / “◀” / “▶” buttons and OK button.

The operation method may differ depending on the contents of the digital teletext.

Follow the instructions displayed on digital teletext screen.

- When “Press “OK” button or similar message appears on the screen, press the **OK** button.

- When the TELETEXT (≡) button is pressed, the TV returns to television broadcasting.
- With digital terrestrial broadcasting (DVB-T), in addition to digital teletext broadcasting together with the normal broadcasting, there are also channels with just digital teletext broadcasting.
- The aspect ratio (picture shape) when watching a channel with just digital teletext broadcasting is the same as the aspect ratio of the picture viewed previously.
- When you press the TELETEXT (≡) button again, the digital teletext screen will be displayed.

## Analogue Teletext

Use of teletext and its functions are identical to the analogue text system. Please do refer to the "TELETEXT" explanations.

## Widescreen


Depending on the type of the broadcast being transmitted, programmes can be viewed in a number of formats. Press the **SCREEN** button repeatedly to change screen format.

When Auto is selected, the format being displayed is determined by the picture being broadcast.

**PLEASE NOTE:** Menu size changes depending on the chosen image size.

## Digital TV Menu System

- Press **MENU** button and DTV main menu will be displayed.

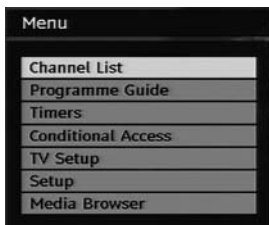

## Channel List

Using "▼" or "▲" buttons on the remote control in main menu, make sure that the first item, Channel List, is highlighted and press the **OK** button to display the Channel List.

You can use following buttons for Move, Delete and Lock functions.

- Channel List is the place where the channels are managed.

**YELLOW:** Tags/untags the selected channel.

**BLUE:** Tags/untags all channels.

## Navigating the Entire Channel List

- Press "▼" or "▲" keys for selecting the previous or next channel.
- You can press ▲ or ▼ buttons to move page up or page down.
- To watch a specific channel, highlight it using "▼" or "▲" buttons and then press **OK** button, while the "Select" item on Channel List menu is highlighted via "◀" or "▶" buttons.

 
## Moving the channels in the channel list

- Press "▼" or "▲" buttons to select the channel that will be moved.
- Press "◀" or "▶" buttons to select the "Move" item on Channel List menu and press **OK** to confirm.



**Note:** If you enter the same programme number of the channel that you want to move, "....services will be replaced. Do you want to continue?" OSD will be displayed. Press **OK** to confirm or select "No" to cancel.

**Note:** The following screen will be displayed when want to move or delete channels that are sorted by LCN (logical channel number) service.




Select "YES" to continue. Select "NO" to cancel (LCN feature is available for only Germany, Austria, Switzerland and Italy country options).

## Deleting the Channels in the Channel List

 - Press "▼" or "▲" buttons to select the channel that will be deleted.
- Press "◀" or "▶" buttons to select the "Delete" item on Channel List OSD.



Press “**OK**” button to delete the highlighted channel in the channel list. Then the message below appears on the screen.



## Renaming channels

To rename a specific channel, the channel must be highlighted via pressing “**▼**” or “**▲**” buttons and then highlight the “**Edit Name**” item by pressing “**◀**” or “**▶**” buttons. Press “**OK**” button to activate rename feature.



Now pressing “**◀**” or “**▶**” buttons moves to the previous/next character. Pressing “**▼**” or “**▲**” buttons toggles the current character, i.e., ‘**b**’ character becomes ‘**a**’ on and ‘**c**’ on . Pressing the numeric buttons ‘**0...9**’ replaces the highlighted character with the characters printed above the key one by one as the button is pressed.

 
Press the **MENU** button to cancel the editing or **OK** button to save the new name.

## Adding Locks to Channels

Channel Locking provides a password-protected access to channels selected by parents.


In order to lock a channel you should know the **Parental Lock** password (default value is set to 0000 in the factory and can only be changed from the **Configuration** menu).

By pressing “**▼**” or “**▲**” buttons, highlight the channel to be locked and select the “**Lock**” option by pressing “**◀**” or “**▶**” buttons. Then press the **OK** button and a password box is displayed:



## Setting Favourites

To set a favourite you should highlight the “**Favourites**” item at the bottom of the Channel List menu. Then press **OK** button and **Edit Favourite List** menu appears on the screen.

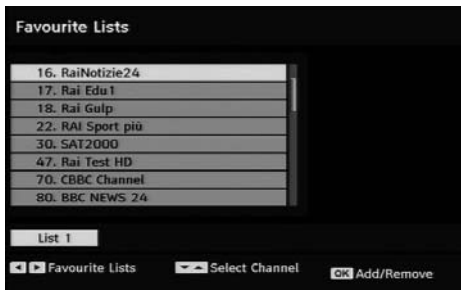

## Adding a Channel to a Favourites List

By pressing “**▼**” or “**▲**” buttons, highlight the channel that you want to add to the favourite list. By pressing **OK** button, the highlighted channel is added to Favourite List. **F** icon indicates that a channel is added to Favourite List.

## Removing a Channel from a Favourite List


- Highlight the channel that you want to remove from the favourite list and press **OK** button to remove. You can press **OK** button again to re-adding a channel.
- To activate Favourites, go to the Configuration menu and select Favourite mode. Use “**◀**” or “**▶**” to set Favourite mode as on. To cancel Favourites, set Favourite Mode to Off.

*Hint: Pressing **INFO** button can help you for displaying information in IDTV.*

## Program Guide

This section is same with the instructions given in the General Operations page. Please see Electronic Programme Guide (EPG) section in the General Operations part.

## Timers

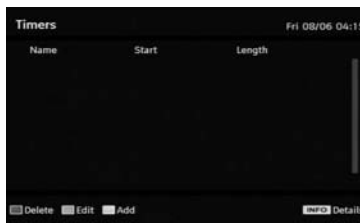

To display timers window, activate the item from the main menu. To add a timer, press the **YELLOW** button on the remote control. Then “**Add Timer**” window appears.

**Channel:** “**◀**” or “**▶**” keys will navigate the user through the TV or Radio list.

**Date:** Starting date is entered via the Left/Right or the numeric buttons.

**Start:** Starting time is entered via the Left/Right or the numeric buttons.

**End:** Ending time is entered via the Left/Right or the numeric buttons.

**Duration:** Displays the duration of the recording.

Duration item will be automatically displayed after the starting and ending times are entered.

**Change / Delete:** permits or prohibits any modifications for other users.

You can save the adjustments by pressing the **GREEN** key or cancel the process by pressing the **RED** button. You can edit the list via **GREEN** key and delete with the **RED** button.

## Common Interface

Press **MENU** button to display the main menu and use the “▼” or “▲” buttons to highlight the “**Common Interface**” line and press **OK** button.

It is required to subscribe to a pay channel company to view the pay channels of the Digital Terrestrial broadcasting.

Obtain the Conditional Access Module (CAM) and the viewing card by subscribing to a pay channel company, then insert those to the Television using the following procedure.

- Switch off the TV and unplug from the mains.
- Insert the CAM, and then the viewing card to the slot.
- The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted.
- Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.
- Some CAMs may require the following set up. Please set the CAM by entering the DIGITAL TV menu, Common Interface then pressing OK button. (CAM set up menu is not displayed when it is not required.)
- To see the viewing contract information:
- Enter DIGITAL TV; press **MENU** button, then highlight Common Interface and press **OK** button.
- When no module is inserted, “**No Common Interface module detected**” message appears on the screen.
- Refer to the module instruction manual for details of the settings.

*NOTE: Insert or remove the CI module only when the TV is in **STANDBY** mode or **SWITCHED OFF**.*

## TV Setup


You can use this item to display the TV functions.

The digital TV Setup menu screen is accessed from the main menu. Press the **MENU** button to display the main menu and use or buttons to highlight “**TV Setup**”. Press **OK** button to display TV Setup menu screen.

You can find detailed information for all menu items in “**Analogue TV Menu System**” section.


## Setup

The adjustments in this menu are given as the following:

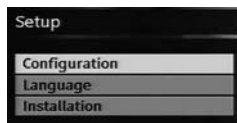

## Configuration

You can configure the settings of your TV. Select **Configuration** from Setup menu and press **OK** to view this menu. Press the **RETURN** button on the remote control to exit.

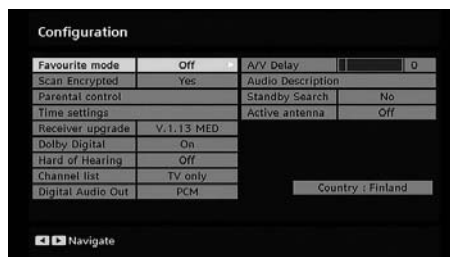

## Favourite Mode

Use this function to enable or disable favourite mode. Press “◀” or “▶” button to set this function as on or off.

## Scan Encrypted

 
Scan Encrypted Channel feature will always be ON after performing first time installation. When this setting is on, search process will locate the encrypted channels as well. If it is set as OFF manually, encrypted channels will not be located while in automatic search or manual search. Use “▼” or “▲” button to select Scan Encrypted and then press “◀” or “▶” button to set this setting as On or Off.

## Parental Control

- Some channels broadcast material which you do not want younger members of the family to watch. Any channel can be 'locked' so that it cannot be selected for viewing unless a four-digit PIN code is entered. In this way any channel not suitable for younger viewers can be prohibited.
- This function enables or disables the menu protection system and allows the PIN code to be changed.



- Use “▼” or “▲” buttons to highlight Parental Control. Press **OK** button to enter Parental Control menu. A dialog box asking for the lock key is displayed:



There is only one key which is set to “0000” initially. Enter lock key. If wrong lock key is entered, the “**WRONG PIN**” message will be displayed on the screen and the TV returns to the previous menu. If the PIN is correct, the Parental Control menu including following items will be displayed:



### Maturity Lock (\*\*)

(\*\*) If you set Country option as UK in the first time installation, Maturity Lock option will not be visible. When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, the TV will not display the related video-audio.

### Menu Lock

Use “◀” or “▶” buttons to set Menu Lock. Here, you can set/reset locking function for the main menu or the installation menu to restrict access. If the menu lock is disabled, there will be free access to the menu system.

**Disabled:** All menus are unlocked.

**All Menus:** All menus are accessible only with the correct lock key. So the user cannot add, delete, rename or move the channels and cannot set the timers.

**Installation Menu:** Installation menu is locked, so the user cannot add channels. Changes will be updated after exiting Configuration Menu.

### Set PIN

Use “▼” or “▲” buttons to go to “Set PIN” option. Press **OK** to display the “Set PIN” window. Use numeric buttons to enter new pin number you will need to input your new pin a second time for verification purposes. The factory default pin number is 0000, if you change the pin number make sure you write it down and keep it safe.

### Time Settings(\*\*)

(\*\*): Time setting will not be available for UK.

In the configuration menu, highlight the Time Settings item by pressing “▼” or “▲” buttons. Press **OK** and Time Settings sub menu will be displayed on the screen:



Use “▼” or “▲” buttons to highlight the Time Zone Setting. Time Zone Setting is set using “◀” or “▶” buttons. It can be set to AUTO or MANUAL. When AUTO is selected, Current Time and Time Zone options will not be available to be set.

If MANUAL option is selected as the Time Zone Setting, Time Zone can be altered:

- By pressing “▼” or “▲” buttons select Time Zone. Use “◀” or “▶” buttons to change the Time Zone between GMT-12 or GMT+12. Current Time on the top of the menu list will then change according to the selected Time Zone.

### Receiver Upgrade


#### Over Air Download (OAD)

To ensure that your TV always has the most up to date information, use this setting. Please ensure that the TV is set to standby mode. The TV automatically powers up at 3.00 A.M. each day and searches for any new information which may be broadcast and will download this to your receiver automatically. This operation will normally take approximately 30 minutes. If you have an important recording to be carried out at 3.00 A.M. and you do not want to interrupt it, disable auto OAD search by performing the following:

- Press **MENU** button and using the “▼” or “▲” buttons to choose **Setup** and press **OK** button.
- Highlight Configuration menu with “▼” or “▲” keys and press **OK**.
- Use “▼” or “▲” buttons to choose “**RECEIVER UPGRADE**” and press **OK** button.
- Using the “◀” or “▶” button change “**Automatic scanning**” from Enabled to Disabled.



- Highlight “**Scan for upgrade**” menu with “▼” or “▲” keys and pres **OK** to commence upgrade.

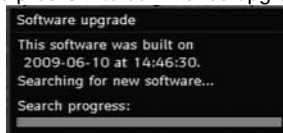

- After the search progress is completed, the message “Completed searching for upgrade. No new software was found” appears on the screen if no new software is found.

## Dolby Digital

In the Configuration Menu, highlight the Dolby D item by pressing “▲” or “▼” buttons. Use the “◀” or “▶” buttons to set the Dolby Digital as On or Off. If the channel that you are watching supports Dolby Digital and Dolby Digital Plus, you can turn this setting on.

## Hard of Hearing (\*)

Use “▼” or “▲” button to select Hard of Hearing and then press “◀” or “▶” button to set this setting as On or Off.

If the broadcaster enables any special signal concerning the audio, you can set this setting as On to receive such signals.

(\*) Hard of Hearing function will not be available for UK.

## Channel List

Use “▼” or “▲” buttons to go to Channel List option. Use or buttons to toggle Channel List Mode. If you select “TV Only”, with the “◀” or “▶” buttons, you navigate through only TV channels. If you select “Radio Only”, with the “◀” or “▶” buttons, you navigate through only radio channels. If you select “Text Only”, with the “◀” or “▶” buttons, you navigate through only text channels. If you choose “Show All” all channels can be navigated. To save the recent changes and exit; press the **MENU** button.

## Digital Audio Out

Use this setting to define digital audio out signal type. Use “◀” or “▶” buttons to set Digital audio out as **AC3** or **PCM**.

If your selected channel includes AC3 sound stream, you should connect your TV to external equipment by using Spdif out of your TV for enabling the sound output. If you have no external sound equipment, please select Digital Audio Out as “PCM” by using “◀” or “▶” button.

## A/V Delay

You can use this setting when there is an AV synchronization problem in the received broadcast. Press “◀” or “▶” button to change the delay.

## Audio Description (Optional)

Audio description refers to an additional narration track for blind and visually impaired viewers of visual media. You can use this feature, only if the broadcaster supports that additional narration track. Use “▼” or “▲” buttons to select an item. Then use “◀” or “▶” buttons to set.

## Audio Description (Optional)

This function enables or disables the audio description feature by pressing the “◀” or “▶” buttons.

## Preferred Language (Optional)

By pressing the “▼” or “▲” buttons the preferred audio description language is being changed. This setting can be used, only if it is available.

## Relative Volume (Optional)

Using this option, the Audio Description volume level can be increased or decreased relatively, according to the general volume.

## Standby Search (\*)

(\*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland.

Use “▼” or “▲” button to select Standby Search and then press “◀” or “▶” button to set this setting as On or Off. If you change Standby Search to Off, this function will be unavailable.

To use Standby search please make sure that you select Standby Search as On.


## Active Antenna (\*)

Use “▼” or “▲” buttons to highlight Active Antenna option. When antenna power option is set as On by pressing “◀” or “▶” button, +5V will be transmitted to the antenna output. This feature enables the use of active antenna.

**Note:** Antenna power should be “Off” when standard antenna is used instead of the active antenna.

## Language Settings

In this menu the user can adjust the preferred language. Select “Language” item in the Setup menu and press OK button. Then language settings menu will be displayed.

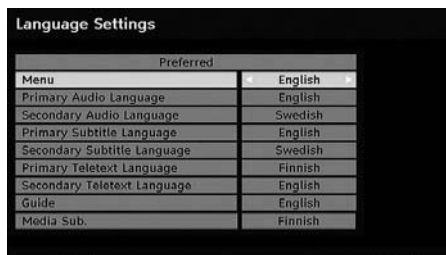


Preferred	
Menu	English
Primary Audio Language	English
Secondary Audio Language	Swedish
Primary Subtitle Language	English
Secondary Subtitle Language	Swedish
Primary Teletext Language	Finnish
Secondary Teletext Language	English
Guide	English
Media Sub.	Finnish

You can set the desired language options by using “▼” / “▲” and “◀” / “▶” buttons.

**Note:** If the Country option is set to Denmark, Sweden, Norway or Finland, the Language Settings menu will function as described below:

## Language Settings

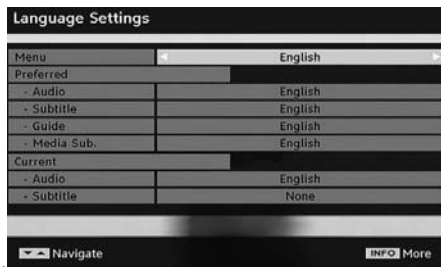

Use “▼” or “▲” buttons to highlight the menu item that will be adjusted and then press “◀” or “▶” button to set.


- Audio Language is used for selecting the soundtrack of a channels. Primary settings are the first priority when multiple choices are available on a broadcast. Secondary settings are the alternatives when the first options are not available.
- Guide Language: If the received EPG data includes the selected guide language, EPG data language will be changed accordingly.
- Teletext language sets the desired teletext language.

**Media Subtitle:** In order to display subtitles properly, use this setting to select a movie subtitle language.

By pressing “◀” or “▶” button, select the desired language option.

## Installation


The Installation menu is mainly intended to help you for creating a Channel Table in most efficient way. Select Installation from the main menu by pressing “▼” or “▲” buttons.

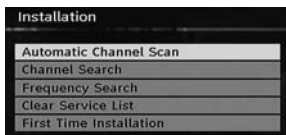

### Automatic Channel Scan

Automatic channel scan is started by pressing **OK** button while Automatic channel scan item is highlighted.

 The following message appears on the screen:




Highlight **Yes** or **No** by using “◀” or “▶” buttons and press **OK** button to confirm.

If **Yes** is selected, automatic search starts.

Selecting **No** cancels automatic search.

 
After search is completed for digital channels, a message asking whether to search for analogue channels appears on the screen:



Highlight **Yes** and press **OK** button to search for analogue channels. The following menu appears on the screen for analogue channel search:



 Set Language item by pressing “◀” or “▶” button. Press “▼” or “▲” button to highlight Country item and then use “◀” or “▶” to set. Press “▼” or “▲” button to highlight TXT Language. Select a region by using “◀” or “▶” button. When finished, press **OK** or **RED** button to continue. To cancel, press the **BLUE** button.



After **APS** is finalized, the programme table will appear on the screen. In the programme table you will see the programme numbers and names assigned to the programmes.

### Manual Search

In Manual Search, the number of the multiplex is entered manually and only that multiplex is searched for the channels. For every valid channel number, signal level and signal quality are shown on the screen.

In both manual and auto search any existing channel in the database is not re-stored to avoid redundant duplicates of that channel.

### Clear Service List (\*)

(\*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland.

Use this setting to clear channels stored. Press “▼” or “▲” button to select Clear Service List and then press **OK**. The following OSD will be displayed on the screen:



 
Press **OK** to cancel.

Select **Yes** by pressing “◀” or “▶” button and press **OK** to delete all of the channels.

### First Time Installation

The user can use this item to load default settings, which were loaded to the receiver at the factory.

To install factory settings, highlight “**First Time Installation**” menu item and press **OK** button, then you will be asked whether or not to delete the settings. Selecting “**Yes**” by pressing **OK** button while the “**Yes**” is highlighted, will delete the existing channel table.




After factory settings are loaded, “**First Time Installation**” menu will be displayed.

The menu which is displayed for language selection appears on the screen at first. By using “▼” or “▲” buttons, select the desired language option, and press **OK** button to activate.

After then, “First time installation” OSD will appear on the screen. By pressing “◀” or “▶” buttons, select the **Country** you want to set and press **OK** button (\* only for EU countries).

Next, active antenna mode selection OSD will appear on the screen. Use “◀” or “▶” to set and press **OK** to continue. See the section, “Initial Settings” for more information.


After active antenna mode option is selected, a message asking for automatic search appears on the screen:

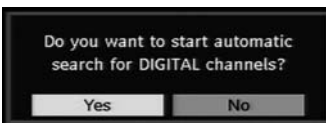

Highlight “**Yes**” item by pressing “◀” or “▶” buttons and press **OK** button to start installation. After search is completed for digital channels, a message asking whether to search for analogue channels appears on the screen. This process is same as described in Automatic Search section.

### Media Browser (in DTV mode)

 Whenever you plug a USB flash disk to your TV, the following message will be displayed on the screen:



Select **YES** or **NO** by pressing “◀” or “▶” button and “**OK**” button to continue.

You can also select Media Browser item from the main menu by using “▼” or “▲” buttons. Press **OK** to view **Media Browser** contents.

You can play audio and photo files from a USB flash disk.

**Note:** Some USB compliant devices may not be supported.

**Note:** Movie Sense and Pixellence features cannot be set while in Media Browser mode.

**Note:** If you plug USB stick in analogue mode, the TV will automatically switch to digital TV mode.

**Note:** If the USB stick is not recognized after Power off/on or First Time Installation, first plug the USB device out and power off/on the TV set. Plug the USB device again.



Press **OK** to browse, “**MENU**” to quit.

### Playing Audio Files:



**Play This (OK)** : Plays the selected file.

**Play (▶)** : Play all media files in the folder starting with the selected one.

**Pause/Resume (|| button)**: Pauses or resumes playback.

**Stop (■ button)** : Stop the playing file.

**Previous/Next (◀▶)** : Jumps to previous or next file to play.

**Shuffle (INFO)** : Plays the files randomly. If shuffle mode is enabled, previous/next functions will also jump to the tracks randomly.

**Loop (BLUE)** : Plays the selected file repeatedly.

**Skip backward / Skip forward (◀ / ▶ button)**

## Viewing JPEG Files



**Jump (0...9)** : jump to selected file using the numeric buttons.

**OK** : view the selected picture in full screen.

**Play / Slideshow (▶ button)** : start to slideshow with all pictures in the folder.

## Slideshow Options




**Pause (|| button)** : Pause the slideshow.

 
**Continue (▶ button)** : Continue with the slideshow.

**Previous/Next (◀ / ▶)** : Jump to previous or next file of slideshow.

**Rotate (▼ / ▲)** : Rotate the picture using up/down buttons.

**RETURN** : Back to file list.

**Shuffle (RED)** : Shows the files randomly and continuous in current folder and  icon turns the highlighted icon. If during a slideshow the shuffle mode is enabled, the next pictures will be chosen randomly (If the loop function is not enabled, the slideshow will stop at the end. If the loop function is enabled, after the slideshow ends, it will start again and again).

**Loop (BLUE)** : Slideshow goes on continuously and  icon turns the highlighted icon.

**INFO** : Activate the operations bar.

## Video Playback (optional)

**Play (▶ button)** : Starts the video playback.

**Stop (■ button)** : Stops the video playback.

 
**Pause (|| button)** : Pause the video playback.

**Rewind (◀◀ button)** : Goes backward.

**Forward (▶▶ button)** : Goes forward.

**Menu (MENU button)** : Sets subtitle/Audio.

You can set subtitles by using **OK** button before starting the playback or by using **MENU** button during the playback. Press **RETURN** button to switch back to previous menu.



# Analogue TV Menu System

## Picture Menu



### Mode

For your viewing requirements, you can set the related mode option.

Press “▼” or “▲” button to select **Mode**. Press “◀” or “▶” button to choose from one of these options: **Cinema**, **Dynamic** and **Natural**.

### Brightness/Contrast/Colour/Sharpness/Hue

Press “▼” or “▲” button to select the desired option. Press “◀” or “▶” button to set the level.

**Note:** *Hue* option can only be visible when the TV receives an NTSC signal.

### Colour Temp

Press “▼” or “▲” button to select **Colour Temp**. Press “◀” or “▶” to choose from one of these options: **Cool**, **Normal** and **Warm**.

**Note:**

- Setting **Cool** option gives white colours a slight blue stress.
- Setting **Warm** option gives white colours a slight red stress.
- For normal colours, select **Normal** option.

### Noise Reduction

If the broadcast signal is weak and the picture is noisy, use **Noise Reduction** setting to reduce the noise amount.

Press “▼” or “▲” button to select **Noise Reduction**. Press “◀” or “▶” to choose from one of these options: **Low**, **Medium**, **High** or **Off**.

### Film Mode

Films are recorded at a different number of frames per second to normal television programmes.

Press “▼” or “▲” button to select **Film Mode**.

Press “◀” or “▶” button to set this feature On or Off.

Turn this feature on when you are watching.

films to see the fast motion scenes clearly.

### Game Mode (optional)

Select **Game Mode** by pressing “▼” or “▲” button. Use “◀” or “▶” button to set Game Mode as **On** or **Off**. When Game Mode is set to On, specific game mode settings, which are optimized for better video quality, will be loaded.

Also; Picture Mode, Contrast, Brightness, Sharpness, Colour and Colour Temp settings will be invisible and disabled while Game Mode is on.

**Note:**

*Picture mode selection button on the remote control will have no function while Game Mode is on.*

### Picture Zoom

Select **Picture Zoom** by pressing “▼” or “▲” button.

Use “◀” or “▶” buttons, to change picture zoom to **Auto**, **16:9**, **4:3**, **Panoramic**, **14:9**, **Cinema**, **Subtitle** or **Zoom**.

### Store

Press “▼” or “▲” button to select **Store**. Press “▶” or **OK** button to store the settings. “**Stored...**” will be displayed on the screen.

### Reset

Press “▼” or “▲” button to select **Reset**. Press “◀” or “▶” or **OK** button to reset the picture modes to factory default settings.

## Sound Menu




### Volume

Press “▼” or “▲” button to select **Volume**. Press “◀” or “▶” button to change the level of the Volume.

## Equalizer

Press “▼” or “▲” button to select **Equalizer**. Press “▶” button to view equalizer menu.

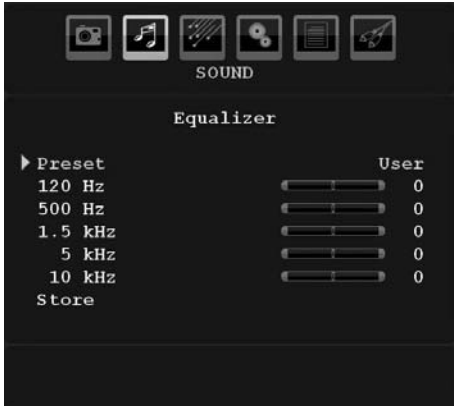

Press “◀” or “▶” button to change the preset. In equalizer menu, the preset can be changed to **Music, Movie, Speech, Flat, Classic** and **User**.

Select the desired frequency by pressing “▼” or “▲” button and increase or decrease the frequency gain by pressing “◀” or “▶” button.

Press the “MENU” button to return to the previous menu.

**Note:** Equalizer menu settings can be changed only when the **Equalizer Mode** is in **User**.

## Balance

This setting is used for emphasizing left or right speaker balance.

Press “▼” or “▲” button to select **Balance**. Press “◀” or “▶” button to change the level of the balance. Balance level can be adjusted between **-32** and **+32**.

## Headphone

Press “▼” or “▲” button to select **Headphone**. Press “▶” button to view the headphone menu.

**Note:** Headphone will be disabled when **SPDIF** option is set to on.

Headphone sub-menu options are described below:

### Volume

Press “▼” or “▲” button to select **Volume**. Press “▶” button to increase headphone volume level. Press “◀” button to decrease headphone volume level. Headphone volume level can be adjusted between 0 and 63.

### Sound Mode (optional)

Press “▼” or “▲” button to select **Sound Mode**. Using “◀” or “▶” button, you can select Mono, Stereo, Dual I

or Dual II mode, only if the selected channel supports that mode.

## AVL

Automatic Volume Limiting (AVL) function adjusts the sound to obtain fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes).

Press “▼” or “▲” button to select **AVL**. Press “◀” or “▶” button to set the AVL as **On** or **Off**.

## Spdif Out

Press “▼” or “▲” button to select **Spdif Out**. Press “◀” or “▶” button to set the **Spdif Out** as **On** or **Off**.

**Note:** If **Spdif Out** is set to **On**, headphone will be disabled.

## Effect (optional)

If you are watching a mono broadcast, set Effect on to obtain a better sound effect which will be more stereo-like. If the current sound system is stereo, switching this effect on will give a more spatial effect.

Press “▼” or “▲” button to select Effect. Press “◀” or “▶” button to set as **On** or **Off**.

## Store

Press “▼” or “▲” button to select Store. Press “▶” or **OK** button to store the settings. “**Stored...**” will be displayed on the screen.

## Feature Menu



### Sleep Timer

Press “▼” or “▲” button to select **Sleep Timer**. Use “◀” or “▶” button to set the **Sleep Timer**.

The timer can be programmed between **Off** and **120** minutes in steps of **10** minutes.

If **Sleep Timer** is activated, at the end of the selected time, the TV goes automatically to standby mode.

### Child Lock

Press “▼” or “▲” button to select **Child Lock**.

Use “◀” or “▶” button to set the Child Lock **On** or **Off**. When On is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons will not work.

Hence, if one of those buttons is pressed, **Child Lock On** will be displayed on the screen when the menu screen is not visible.

## Language

Press “▼” or “▲” button to select **Language**. Use “◀” or “▶” button to select the **Language**.

## Default Zoom

While zoom mode is set as AUTO, the TV will set the zoom mode in accordance with the signal of the broadcast. If there is no WSS or aspect ratio information, the TV will then use this setting to adopt. Press “▼” or “▲” button to select **Default Zoom**. You can set **Default Zoom** to **Panoramic, 16:9, 4:3** or **14:9** by pressing “◀” or “▶” button.

## Blue Background

If the signal is weak or absent, the TV will automatically change to a blue screen. To enable this, set **Blue Background** to **On**.

By pressing “▼” or “▲” button, select **Blue Background**. Press “◀” or “▶” button to set **Blue Background** as **On** or **Off**.

## Menu Background

Press “▼” or “▲” button to select **Menu Background**. You can set menu background level by pressing “◀” or “▶” button.

## Backlight

This setting controls the backlight level. Select **Backlight** by pressing “▼” or “▲” button. Press “◀” or “▶” button to set **Backlight** to **Auto, Medium, Maximum** or **Minimum**.

## Menu Timeout

To set a specific display timeout for menu screens, set a value for this option.

Press “▼” or “▲” button to select **Menu Timeout**. Use “◀” or “▶” button to change menu timeout to **15 sec, 30 sec** or **60 sec**.

## Teletext Language

Press “▼” or “▲” button to select **Teletext Language**. Use “◀” or “▶” button to change **Teletext Language** to **West, East, Turk/Gre, Cyrillic, Arabic** or **Persian**.

## Ext Out

Press “▼” or “▲” button to select Ext Out. Use “◀” or “▶” button to set the Ext Out as On or Off.

### Note:

*For copying from a DVD or VCR device, you should choose desired source from source menu and turn “On” to EXT Out from feature menu.*

*Ext Out should be On in order to use Timers function in the DTV mode.*

## HDMI PC Full Mode (optional)

If you want to view PC screen in HDMI mode by using external connection, HDMI PC FULL MODE option should be On to adjust the screen ratio correctly. This item might be inactive in some resolutions.

**Note:** *If you connect an HDMI device and switch the TV to HDMI mode, this feature will be visible (except for 1080i/1080P resolution).*

## Full Mode (optional)

If you connect a device via HDMI connectors and set 1080i/1080P resolutions, Full Mode item will be visible. You can set Full Mode as 1:1 or Normal by using “◀” or “▶”. If you select 1:1, screen ratio will be adjusted correctly. If you set Normal, screen ratio may expand.

## Install Menu



## Program

Press “▼” or “▲” button to select Program. Use “◀” or “▶” button to select the program number. You can also enter a number using the numeric buttons on the remote control. There are 200 programme storage between 0 and 199.

## Band

Band can be selected either C or S. Press “◀” or “▶” button to set Band.

## Channel

Channel can be changed by “◀” or “▶” button or numeric buttons.

## Colour System

Press “▼” or “▲” button to select Colour System. Use “◀” or “▶” button to change the colour system to PAL, PAL 60, SECAM or AUTO.



## Sound System

Press "▼" or "▲" button to select Sound System. Press "◀" or "▶" button to change the sound system to BG,DK, I, L or L'.

## Fine Tune

Press "▼" or "▲" button to select Fine Tune. Press "◀" or "▶" button to adjust the tuning.

## Search

Press "▼" or "▲" button to select Search. Use "◀" or "▶" button to start programme searching. You can also enter the desired frequency using the numeric buttons while Search item is highlighted.

## Store

Press "▼" or "▲" button to select Store. Press "▶" or **OK** button to store the settings. "Stored..." will be displayed on the screen.

## Install Menu in AV Modes

The following screen appears in the install menu when the TV is in AV modes. Note that limited options will be available. Switch to TV mode for viewing complete version of the **Install** menu.



## Colour System

Press "▼" or "▲" button to select **Colour System**. Use "◀" or "▶" button to change the colour system to **PAL, SECAM, PAL60, AUTO, NTSC 4,43** or **NTSC 3,58**.

## Store

Press "▼" or "▲" button to select **Store Program**. Press "▶" or **OK** button to store the settings. "Stored..." will be displayed on the screen.

## Program Table

Select **Program Table** by pressing "▼" or "▲" button. Press "▶" to display Program Table:



By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except for the AV modes). By cursor action, programme selection is done automatically.

## Name

To change the name of a programme, select the programme and press the **RED** button.

The first letter of the selected name will be highlighted. Press "▼" or "▲" button to change that letter and "◀" or "▶" button to select the other letters. By pressing the **RED** button, you can store the name.

## Move

Select the programme which you want to move by navigation buttons. Press the **GREEN** button. By navigation buttons move the selected programme to the decided programme space and press the **GREEN** button again.

## Delete

To delete a programme, press the **YELLOW** button. Pressing the **YELLOW** button again erases the selected programme from the programme list, and the following programmes shift one line up.

## APS (Auto Programming System)

 
When you press the **BLUE** button for starting automatic tuning, **Auto Programming System** menu will appear on the screen:



## Country

Press “▼” or “▲” button to select your country. If you want to exit from A.P.S. function, press the **BLUE** button.

When you press **OK** or **RED** button for starting automatic tuning, all stored programmes will be erased and the TV will search for available channels. During the search, the following OSD will be displayed:



Whenever you press the **BLUE** button, APS function stops and Program Table appears on the screen.

If you wait until the end of APS, Program Table will be displayed with the programmes found and located.

## Source Menu

Press “▼” or “▲” button and select the sixth icon. Then press “▶” or **OK** button. Source menu appears on the screen:



In source menu, highlight a source by pressing “▼” or “▲” button and switch to that mode by pressing “▶” button. Source options are; **TV, DTV, DVD/USB, EXT-1, FAV, HDMI, YPbPr and PC-VGA.**

**Note:** Once you have connected optional equipment systems to your TV, you should select the required input to view pictures from that source.

## PC Mode Menu System

See “**Connecting the LCD TV to a PC**” section for connecting a PC to the TV set.

For switching to **PC** source, press “**SOURCE**” button on your remote control and select PC input. You can also use “**Source**” menu to switch to **PC** mode.

*Note that PC mode menu settings are available only while the TV is in PC source.*

## PC Position Menu

Select the first icon by pressing “◀” or “▶” button. **PC Position** menu appears on the screen:



### Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically. This setting therefore automatically optimizes the display.

Select Autoposition item by using “▼” or “▲” buttons. Press **OK** or “◀”, “▶” button.

**Warning:** Please ensure auto adjustment is performed with a full screen image to ensure best results.

### H (Horizontal) Position

This item shifts the image horizontally to right hand side or left hand side of the screen.

Select **H Position** item by using “▼” or “▲” button. Use “◀” or “▶” button to adjust the value.

### V (Vertical) Position

This item shifts the image vertically towards the top or bottom of the screen.

Select **V Position** item by using “▼” or “▲” button. Use “◀” or “▶” button to adjust the value.

### Phase

Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

Select **Phase** item by using “▼” or “▲” buttons. Use “◀” or “▶” button to adjust the value.

### Dot Clock

Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

Select **Dot Clock** item by using “▼” or “▲” buttons. Use “◀” or “▶” button to adjust the value.

## PC Picture Menu

For adjusting PC picture items, do the following:

Press “◀” or “▶” button to select the second icon. PC Picture menu appears on the screen.

**Brightness, Contrast, Colour and Colour Temperature** settings in this menu are identical to settings defined in TV picture menu under “Analogue TV Menu System”.

**Note:** If you set Colour Temp as User, you can define R, G, B settings manually.

Sound, Feature and Source settings are identical to the settings explained in Analog TV menu system.

## Displaying TV Information

**Programme Number, Programme Name, Sound Indicator and Zoom Mode** information is displayed on the screen when a new programme is entered or “INFO” button is pressed.

## Mute Function

Press “M” button to disable sound. Mute indicator will be displayed in the upper side of the screen.

To cancel mute, there are two alternatives; the first one is pressing the “M” button and the second one is increasing the volume level.

## Picture Mode Selection

By pressing **PRESETS** button, you can change **Picture Mode** settings in accordance with your viewing requirements. Available options are Dynamic, Natural and Cinema.

*Note: This feature cannot be set while in PC mode.*

## Freezing Picture

You can freeze the picture on the screen by pressing the “OK” button on the remote control. Press the “OK” button to freeze picture. Press again to quit freeze mode (Note: Not available in “ATV” mode).

## Zoom Modes

You can change the aspect ratio (image size) of the TV for viewing the picture in different zoom modes.

Press **SCREEN** button to directly change the zoom mode.

Available zoom modes are listed below.

**Note:**

In **YPbPr** and **HDMI** modes, while in **720p-1080i** resolutions, only **16:9** mode is available.

*Zoom mode cannot be changed while in PC mode.*

## Auto

 
When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external

device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

## 16:9

This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **16:9** mode to restore the picture to its original shape.


## 4:3

 Use to view a normal picture (4:3 aspect ratio) as this is its original size.



## Panoramic

This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



The top and bottom of the picture are slightly cut off.

## 14:9

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.



## Cinema

This zooms up the wide picture (16:9 aspect ratio) to the full screen.



 
## Subtitle

This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



## Zoom

This option zooms to the picture.



Note: You can shift to screen up or down by pressing “▼” / “▲” buttons while picture zoom is selected as panoromic, 14:9, Cinema or Subtitle.

## Teletext

Teletext system transmits information such as news, sports and weather on your TV. Note that is the signal degrades, for example in poor/adverse weather conditions, some text errors may occur or the teletext mode may be aborted.

**Teletext function buttons** are listed below:

### “” Teletext/Mix On-Off

Activates teletext mode when pressed once.

Pressing the button for the second time, activates teletext mix feature. Pressing again will quit the teletext mode.

### “RETURN” Index

Selects the teletext index page.

### “SCREEN” Expand

Press once to enlarge top half of the page, press again to enlarge the bottom half of the page. Press again to revert back to normal size.

### “INFO/” Reveal

Shows hidden information (e.g. solutions of games).

### ”OK” Hold

Holds a text page when convenient. Press again to resume.

### P+ / P- and numbers (0-9)

Press to select a page.

**Note:** Most TV stations use code 100 for their index pages.

### Coloured Buttons

#### (RED/GREEN/YELLOW/BLUE)

Your TV supports both **FASTEXT** and **TOP text** systems. When these systems are available, the pages are divided into groups or topics.

When **FASTEXT** system is available, sections in a teletext page will become colour-coded and can be selected by pressing the coloured buttons. Press a coloured button that corresponds to with your needs.

The coloured writings will appear, showing you which coloured buttons to use when **TOP text** transmission is present. Pressing **P** - or **P +** commands will request the next or previous page respectively.

### TXT (Teletext) Subtitle

If you press **SUBTITLE** button, teletext subtitle information will be displayed on the bottom right part of the screen (if available). You can set the desired option by highlighting it using “▼” or “▲” button and then by pressing OK button

## Tips

### Screen Care

Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the coating layer of the TV screen.

For your safety, unplug the mains plug when cleaning the set. When moving the TV, hold it properly from the bottom part.

### Image Persistence

Please note that ghosting may occur while displaying a persistent image. LCD TVs' image persistence may disappear after a short time. Try turning off the TV for a while.

To avoid this, do not leave the screen in still picture for extended periods.

### No Power

If your TV system has no power, please check the main power cable and connection to the mains socket outlet.

### Poor Picture

Have you selected the correct TV system? Is your TV set or house aerial located too close to a non-earthed audio equipment or neon lights, etc.?

Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.

Is the picture or teletext unrecognisable? Check if you have entered the correct frequency. Please retune the channels.

The picture quality may degrade when two peripherals are connected to the TV at the same time. In such a case, disconnect one of the peripherals.


### No Picture

Is the aerial connected properly? Are the plugs connected tightly to the aerial socket? Is the aerial cable damaged? Are suitable plugs used to connect the aerial? If you are in doubt, consult your dealer.

No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

Also make sure the correct input source has been selected.

### Sound

You can not hear any sound. Did you perhaps interrupt the sound, pressing the  button?

Sound is coming from only one of the speakers. Is the balance set to one extreme? See **Sound Menu**.

## Remote Control

Your TV no longer responds to the remote control. Perhaps the batteries are exhausted. If so you can still use the local buttons at the bottom of the TV.

## Input Sources

If you cannot select an input source, it is possible that no device is connected.

Check the AV cables and connections if you have tried to connect a device.

## Appendix A: PC Input Typical Display Modes

The display has a maximum resolution of 1600 X 1200. The following table is an illustration of some of the typical video display modes.

Your TV may not support different resolutions. Supported resolution modes are listed below.

If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

Index	Resolution		Frequency		Standard
	Hor	Ver	Ver (Hz)	Hor (KHz)	
1	640	480	60	31.5	VESA
2	640	480	72	37.9	VESA
3	640	480	75	37.5	VESA
4	800	600	56	35.2	VESA
5	800	600	60	37.9	VESA
6	800	600	70	43.8	
7	800	600	72	48.1	VESA
8	800	600	75	46.9	VESA
9	832	624	75	49.7	MAC
10	1024	768	60	48.4	VESA
11	1024	768	70	56.5	VESA
12	1024	768	72	57.7	
13	1024	768	75	60.0	
14	1152	864	70	64.2	VESA
15	1152	864	75	67.5	VESA
16	1152	870	75	68.9	MAC
17	1280	768	60	47.7	VESA
18	1360	768	60	47.7	
19	1280	960	60	60.0	VESA
20	1280	1024	60	64.0	VESA
21	1280	1024	75	80.0	VESA
22	1600	1200	60	75.0	VESA

## Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)

Source	Supported Signals		Available
EXT-1 (SCART)	PAL 50/60		O
	NTSC 60		O
	RGB 50		O
	RGB 60		O
FAV	PAL 50/60		O
	NTSC 60		O
YPbPr	480I	60Hz	O
	480P	60Hz	O
	576I	50Hz	O
	576P	50Hz	O
	720P	50Hz	O
	720P	60Hz	O
	1080I	50Hz	O
	1080I	60Hz	O
	1080P	50Hz	O
	1080P	60Hz	O
HDMI1	480I	60Hz	O
	480P	60Hz	O
	576I	50Hz	O
	576P	50Hz	O
	720P	50Hz	O
	720P	60Hz	O
	1080I	50Hz	O
	1080I	60Hz	O
	1080P	50Hz	O
	1080P	60Hz	O
	1080P	24 HZ	O

(X: Not Available, O: Available)

**Note:** In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## Appendix C: Supported File Formats for USB Mode

Media	File Extension	Format		Remarks
		Video	Audio	(Maximum resolution/Bit rate etc.)
Movie (optional)	.mpg/ .dat/ .vob	MPEG1	MPEG Layer 1/2/3	
		MPEG2	MPEG2	
	.avi	XviD/ 3ivx	PCM/MP3	XviD Version up to: 1.1.2
		MPEG4	PCM/MP3	
		MS ISO MPEG4	PCM/MP3	Support SP and ASP
Music	-	-	PCM	Sample Rate: 8K ~ 48KHz
	.mp3	-	MPEG 1/2 Layer 1/2/3 (MP3)	Sample Rate: 8K ~ 48KHz, Bit Rate: 32K~320Kbps
Photo	.jpg	Baseline JPEG		WxH = 14592x12288, Up to 179 Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale
		Progressive JPEG		Up to 4 Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale
External Subtitles (optional)		.srt		Support Text File Format, but do not support Picture File Format
		.smi		

**Note:** Necessary bitrates for some video types are higher than USB limits. For this reason, some video types cannot be played.



**Battery**

### Information for Users on Disposal of Old Equipment and Batteries

[European Union only]

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

**Notice:** The sign Pb below the symbol for batteries indicates that this battery contains lead.

**Products**

## Specifications

### TV BROADCASTING

PAL/SECAM B/G D/K K' I/I' L/L'

### RECEIVING CHANNELS

VHF (BAND I/III)

UHF (BAND U)

HYPERBAND

### NUMBER OF PRESET CHANNELS

200

### CHANNEL INDICATOR

On Screen Display

### RF AERIAL INPUT

75 Ohm (unbalanced)

### OPERATING VOLTAGE

220-240V AC, 50 Hz.

### AUDIO

German+Nicam Stereo

### AUDIO OUTPUT POWER ( $W_{RMS}$ ) (10% THD)

2 x 2,5

### POWER CONSUMPTION (W)

60 W (max)

< 1 W (Standby)

### PANEL

19" wide display

### DIMENSIONS (mm)

DxLxH (With foot): 118 x 463 x 344

Weight (Kg): 5.75

DxLxH (Without foot): 63 x 463 x 312

Weight (Kg): 5.50

## Transmission Standards:

DVB-T, MPEG2,DVB-T, MPEG4 HD

### i. DEMODULATION

-Symbol rate: COFDM with 2K/8K FFT mode.

-Modulation: 16-QAM - 64-QAM FEC for all DVB modes (automatically found)

### ii. VIDEO

-H.264 (MPEG-4 part 10) main and high profile level 4.1/MPEG-2 MP@HL video decoder.

-HD display multi format capable (1080i, 720p, 576p)

-CVBS analogue output.

### iii. AUDIO

-MPEG-1 layer I/II, MPEG-2 layer II, AAC, HEAAC, AC3

-Sampling frequencies supported are 32, 44.1 & 48 kHz




## Contents

Features .....	32
General Properties.....	32
Safety Information .....	33
Notes on Discs .....	33
On handling discs .....	33
On cleaning.....	33
Licence Notification .....	33
How to Watch a DVD.....	33
DVD Control Panel Buttons .....	34
Overview of the Remote Control .....	34
General Operation .....	35
General Playback .....	36
Basic Play.....	36
For your reference: .....	36
Notes on Playback:.....	36
Setup Menu Items .....	36
Video Setup Page.....	36
TV Type.....	36
DivX VOD .....	36
Language Setup .....	36
OSD LANG .....	36
AUDIO .....	36
DISC MENU.....	36
SUBTITLE.....	36
Preferences .....	37
DEFAULT.....	37
DOWNMIX .....	37
PASSWORD (Change Password): .....	37
Troubleshooting.....	37
The picture quality is poor (DVD).....	37
Disc does not play .....	37
Wrong OSD language.....	37
Some functions (Angle, Zoom etc) do not work	37
No picture .....	37
No sound .....	37
Distorted sound.....	37
No response from remote control .....	38
If nothing works.....	38
Definition of Terms .....	38
Disc Types Compatible with This Unit .....	39
Supported File Formats .....	40
Specifications .....	40

## Features

### General Properties

- DVD / CD / CD-R / CD-RW / MP3 / JPEG / MPEG / DivX playback.
- NTSC/PAL playback (according to disc content)
-  **D I G I T A L**, LPCM audio via coaxial and optical digital audio outputs. (optional)
- Multi-Audio (up to 8) support (According to disc content)
- Multi-Subtitle (up to 32) support (According to disc content)
- Multi-Angle (up to 9) support (According to disc content)
- 8 level parental control
- Fast forward and rewind in 5 different speeds. (2x, 4x, 8x, 16x, 32x)
- Slow motion playback in 4 different speeds. (1/2x, 1/4x, 1/8x, 1/16x forward)
- Frame by frame forward playback.
- Search Mode
- Repeat
- Coaxial audio output (optional)
- Copied disks may be incompatible.

### Note

- This DVD player may not support some MP3 recordings due to differences in recording formats or disc type.
- Please read the owner's manual about MP3 playback.
- CD-R/CD-RW discs recorded by CD-DA method can be played. Some CD-R/CD-RW discs may be incompatible due to laser pick-up and disc design.
- DVD-R/RW discs recorded by DVD-Video method can be played. Some DVD-R/RW discs may be incompatible due to laser pick-up and disc design.
- Some discs may be incompatible with JPEG Viewer function due to different recording format or condition of the discs.

## Safety Information

### CAUTION

DVD Player is a class 1 laser product. However this product uses a visible laser beam which could cause hazardous radiation exposure. Be sure to operate the player correctly as instructed.

**CLASS 1  
LASER PRODUCT**

- Manufactured under license from Dolby Laboratories. "Dolby", and the double-D symbol are trademarks of Dolby Laboratories.

### RISK OF ELECTRIC SHOCK

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



## Notes on Discs

### On handling discs


- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.
- If the disc is contaminated with any substance like glue remove before using it.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature can rise quickly and damage the disc.
- After playing, store the disc in its case.

## On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.

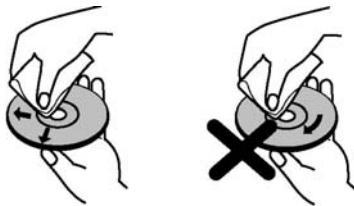


- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

## Licence Notification

- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## How to Watch a DVD

When placing a disc into the loader, labeled side of the disc should be on the front:

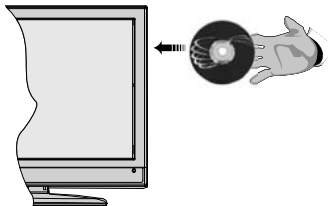

When TV set is turned on, first switch to DVD source by using the **SOURCE** button on the remote control. Press play on the remote control, or directly press play button at the front panel. If there is no disc inside the loader, place a DVD first and press play.

## DVD Control Panel Buttons

### A. Disc loader


### B. Play / Pause

Plays/pauses the disc. When DVD menu (root menu) is active, this button functions as "button select" (selects the highlighted item in menu) if this is not prohibited by the disc.

### C. Stop / Eject


Stop playing disc / Eject or Load the disc Note:

- You cannot eject the disc via the remote control.
- While playing a file, you should press STOP button three times to eject.

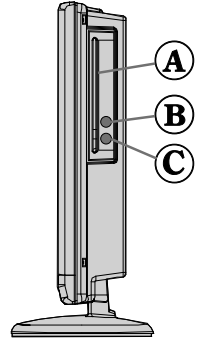

## Overview of the Remote Control

1. Standby
2. Numeric buttons
3. Return back
4. Language selection (Set language)
5. Display time / DVD menu
6. Clear
7. Stop
8. No function
9. Rapid Reverse
10. Rapid advance
11. Info
12. Zoom
13. Repeat
14. Root
15. Menu
16. Title
17. OK / Select
18. Navigation Buttons
19. Subtitle
20. Angle
21. Search mode
22. Play
23. Pause
24. Skip next
25. Skip previous

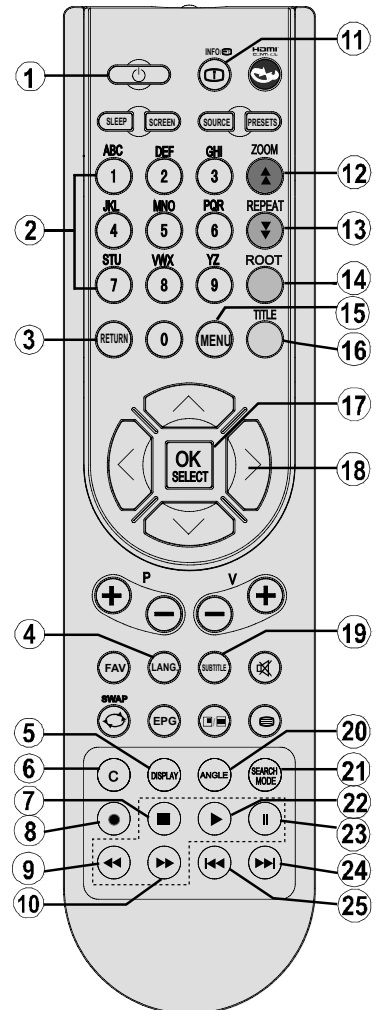

## General Operation

You can operate DVD, movie CD, music or picture CD's content by using the proper buttons on your remote control. Below are main functions of commonly used remote control buttons.

Buttons on the Remote Control	DVD Playback	Movie Playback	Picture Playback	Music Playback
▶	Play	Play	Play	Play
⏸	Pause	Pause	Pause	Pause
■	Stop	Stop	Stop	Stop
⏮ / ⏭	Skip backward/forward	Skip backward/forward	Previous / Next	Previous / Next
◀ / ▶	Shifts the zoomed picture left or right (if available).			
▼ / ▲	Highlights a menu item. / Shifts the zoomed picture up or down (if available).			
⏪ / ⏩	Rapid advance / Rapid reverse			
ANGLE	Views the scene from different angles (if available).	Changes slide effect (depends on the content).		X
C	Clears digit (if available).			
DISPLAY	Displays time / Views main setup menu			
INFO	Time counter mode selection (during playback). Press repeatedly to switch between modes.			
LANG.	Audio language.		X	X
MENU	Displays TV menu.			
OK / SELECT	Enter / View / Play			
REPEAT	Displays repeat options.			
RETURN	Returns back to the previous menu (if available).			
ROOT	Goes back to the root folder (if available).			
SEARCH MODE (*)	Direct selection of scenes or time.		Selects the desired file.	Selects the desired file.
SUBTITLE	Subtitle on-off. Press repeatedly to switch between subtitle options.		X	X
SWAP	Media source selection.			
TITLE	Displays disc menu (if available).	Displays disc menu (if available).	X	X
ZOOM	Zooms picture. Press repeatedly to switch between zoom options.			

Other Functions – Button Combinations (During playback)	
⏸ + ⏭	Slow forward.
[ ⏸ + ⏭ ] + ⏮ ⏭	Sets slow forward speed.
⏭ + ⏭	Sets rapid advance speed.
⏮ + ⏮	Sets rapid reverse speed.
■ + ■	Confirms stop command.
⏸ + ⏭	Press ⏭ repeatedly to advance manually.

(\*) You can switch to title by pressing numeric keys directly. You need to press 0 and then digit key to switch one digit titles (example: to select 5, press 0 and 5).

## General Playback

### Basic Play

1. Press on the power button
2. Please insert a disc to the loader.

The disc will be automatically loaded and play commences if the disc does not have any menus recorded on it.

A menu may appear on the TV screen after a few moments or the film may start immediately after the introduction of the Film Company. This behaviour depends on the disc content and may change.

**Note:** Step 3 and 4 is available only when a menu is recorded on the disc.

3. Press “▼” / “▲” / ◀ / ▶ or the number button (s) to select the preferred title.
4. Press SELECT.

Play of the selected items now starts. The played item may be a motion picture, a still picture or another submenu depending on the disc.

### For your reference:

If an action corresponding to a button is prohibited the “⊘” symbol appears.

### Notes on Playback:

1. No sound will be heard during Rapid advance or Rapid reverse.
2. No sound will be heard during Slow motion play.
3. Reverse slow motion play is not available.
4. In some cases, the subtitle language is not changed immediately to the selected one.
5. When the preferred language is not selected even after pressing the button several times, it means that the language is not available on the disc.
6. When the player is restarted or the disc is changed, the subtitle selection is automatically changed back to the initial settings.
7. If a language is selected, not supported by the disc, the subtitle language will automatically be set to the disc's priority language.
8. Usually a circulation will happen while switching to another language, that is you can cancel the subtitle by pressing this button a number of times until “Subtitle Off” appears on the screen.
9. When the power is turned on or the disc is removed, the language heard is the one selected at the initial settings. If this language is not recorded on the disc, only the available language on the disc will be heard.
10. Some DVDs may not contain root and/or title menus.

11. Reverse stepping is not available.


12. For your convenience:

If you attempt to enter a number greater than the total time of the current title, the time search box disappears and “⊘ Input Invalid” message appears on up-left corner of screen.

13. Slide Show is disabled when the ZOOM mode is on.

## Setup Menu Items

### Video Setup Page

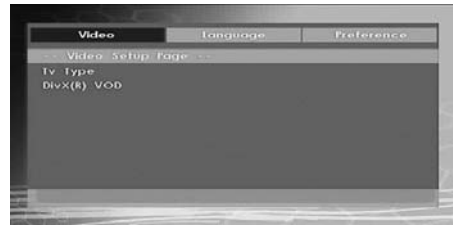

### TV Type

TV Type is only available as 'PAL'. The TV set also supports NTSC signal; however, the signal will be converted to PAL when it appears on the screen.

### DivX VOD

DivX VOD provides the convenience of streaming video in terms of quality and performance.

### Language Setup



### OSD LANG

You can select the default OSD language of the player menus

### AUDIO

You can select the default audio language if supported by the DVD disc.

### DISC MENU

You can select the DVD's disc menu language among these languages. Disc menu appears in the selected language, if supported by the DVD disc.

### SUBTITLE

You can select the default subtitle language if supported by the DVD disc.

## Preferences



### DEFAULT

If you choose RESET and press SELECT, the factory-presets are loaded. Parental level and parental password does not change.

### DOWNMIX

This mode can be selected when the digital audio output of the TV is used.

**SURROUND: Surround sound output.**

**STEREO: Two channels stereo.**

**PARENTAL (Parental Level)**



Playing some DVDs can be limited depending on the age of users. The "Parental Control" function allows playback limitation level to be set by the parent.

Parental Level can be adjusted to one of the eight levels. Level "8 ADULT" adjustment let you watch all of the DVD titles ignoring the DVD disc's parental level. You can watch the DVD discs, which has the same or lower parental level than the player's level only.

**PASSWORD (Change Password):**

Using this item you can change the current password.

To change the password you will be prompted to enter your old password. After you have entered your old password, you can now enter the new 4-digit password.

You can use C key to delete the incorrect entry.

*Note: Factory preset of the password is "0000". You have to enter XXXX digital password every time you want to change the parental level. If you forget your password please contact technical service.*

## Troubleshooting

### The picture quality is poor (DVD)

- Make sure the DVD disc surface is not damaged. (Scratch, fingerprint etc.)
- Clean the DVD disc and try again.

*See instructions described in "Notes on Discs" to clean your disc properly.*

- Ensure that the DVD disc is in the drawer with the label uppermost.
- A damp DVD disc or condensation may effect the equipment. Wait for 1 to 2 hours in Stand-by to dry the equipment.

### Disc does not play

- No disc in the machine.  
*Place a disc into the loader.*

- Disc incorrectly loaded.

*Ensure that the DVD disc is in the drawer with the label uppermost.*

- Wrong type of disc. The machine cannot play CD-ROMS etc.
- The region code of the DVD must match the player.

### Wrong OSD language

- Select the language in the set-up menu.
- The language for the sound or subtitles on a DVD cannot be changed.
- Multilingual sound and/or subtitles not recorded on the DVD.
- Try to change the sound or subtitles using DVD's title menu. Some DVD's do not allow the user to change these settings without using the disc's menu

### Some functions (Angle, Zoom etc) do not work

- These functions are not available on the DVD.
- Angle can only be changed when the angle symbol is displayed.

### No picture

- Have you pressed the correct buttons on the remote control? Try once more.

### No sound

- Check the volume is set to an audible level.
- Make sure you have not switched the sound off accidentally.

### Distorted sound

- Check that the appropriate listening mode setting is correct.

## No response from remote control

- Make sure the remote control is in the correct mode.
- Check batteries are fitted correctly.
- Change the batteries.

## If nothing works

If you have tried the above solutions and none seem to work, try switching your TV-DVD off and on again. If this does not work, contact your supplier or TV-DVD repair technician. Never attempt to repair a defective TV-DVD yourself.

## Definition of Terms

### Angle

Recorded onto some DVD discs are scenes, which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.). With such discs, the ANGLE button can be used to view the scene from different angles.

### Chapter Number

These numbers are recorded on DVD discs. A title is subdivided into many sections, each of which are numbered, and specific parts of video presentations can be searched quickly using these numbers.

### DVD

This refers to a high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG II) and high-density recording technology. DVD enables aesthetically pleasing full-motion video to be recorded over long periods of time (for instance, a whole movie can be recorded).

DVD has a structure consisting of two 0.6-mm thin discs, which are adhered to each other. Since the thinner the disc, the higher the density at which the information can be recorded, a DVD disc has a greater capacity than a single 1.2 mm thick disc. Since the two thin discs are adhered to each other, there is the potential to achieve double-sided play sometime in the future for even longer duration play.

### Subtitles

These are printed lines appearing at the bottom of the screen, which translate or transcribe the dialogue. They are recorded on the DVD discs.

### Time Number

This indicates the playtime, which has elapsed from the start of a disc or a title. It can be used to find a specific scene quickly. (Not all discs permit the time search feature to be used. Availability is determined by the disc's manufacturer.)

## Title Number

These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

## Track Number

These numbers are assigned to the tracks, which are recorded on AudioCDs. They enable specific tracks to be located quickly.

## Dolby Digital

Many movie theatres are equipped with 5.1 channel surround systems. This same type of technology is available to you in your home. To enjoy full 5.1-channel surround, your DVD player must be connected to an external Dolby Digital decoder via the digital outputs (either coaxial or optical).

## Dolby Pro Logic

This is Dolby Laboratories' technology to decode Dolby Surround encoded programs actively. Dolby Surround programs have four channels of audio (Left, Center, Right and Surround) encoded into a standard 2-channel stereo signal. The rear channel is monaural.

## LPCM

LPCM stands for Pulse Code Modulation and is digital audio.






## MPEG

Short for Moving Picture Experts Group. This is an international standard for compression of moving images. On some DVDs digital audio has been compressed and recorded in this format.

## DivX

DivX is a digital video compression technology based on MPEG-4 and developed by DivX Networks Inc.

## Disc Types Compatible with This Unit

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
<b>DVD</b> 	<b>Audio + Video</b>	12 cm	Single - sided; 240 min. Double - sided; 480 min.	<ul style="list-style-type: none"> <li>• DVD contains excellent sound and video due to Dolby Digital and MPEG-2 System.</li> <li>• Various screen and audio functions can be easily selected through the on screen menu.</li> </ul>
		8 cm	Single - sided; 80 min. Double - sided; 160 min.	
<b>AUDIO-CD</b> 	<b>Audio</b>	12 cm	74 min.	<ul style="list-style-type: none"> <li>• An LP is recorded as an analog signal with more distortion. CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.</li> </ul>
		8 cm	20 min.	
<b>MP3-CD</b> 	<b>Audio (xxxx.mp3)</b>	12 cm	<b>It depends on MP3 quality.</b>	<ul style="list-style-type: none"> <li>• MP3 is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.</li> </ul>
		8 cm		
<b>PICTURE-CD</b> 	<b>Video (still picture)</b>	12 cm	<b>It depends on JPEG quality.</b>	<ul style="list-style-type: none"> <li>• JPEG is recorded as a Digital Signal with better picture quality over time.</li> </ul>
		8 cm		
<b>DivX®</b> 	<b>Audio + Video</b>	12 cm	<b>It depends on DivX quality</b>	<ul style="list-style-type: none"> <li>• Video &amp; Audio with MPEG-4 Compression technology.</li> </ul>
		8 cm		



## Supported File Formats

Media	File Extension	Format		Remarks
		Video	Audio	(Maximum resolution/Bit rate etc.)
Movie (optional)	.mpg/ .dat/ .vob	MPEG1	MPEG Layer 1/2/3	
		MPEG2	MPEG2	
	.avi	XviD/ 3ivx	PCM/MP3	XviD Version up to: 1.1.2 / DivX 3.1.x, 4.x, 5.x
		MPEG4	PCM/MP3	
		MS ISO MPEG4	PCM/MP3	Support SP and ASP
Music	-	-	PCM	Sample Rate: 8K ~ 48KHz
	.mp3	-	MPEG 1/2 Layer 1/2/3 (MP3)	Sample Rate: 8K ~ 48KHz, Bit Rate: 64K~320Kbps
Photo	.jpg	Baseline JPEG		WxH = 8902x8902 up to 77Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale
		Progressive JPEG		Up to 4 Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale
External Subtitles (optional)	.srt			Support Text File Format, but do not support Picture File Format
	.smi			
	.sub			
	.ssa			
	.ass			

*Note: It is not guaranteed that all DivX formats are supported.*

## Specifications

Types of Discs Supported	<b>DVD:</b> SS/SL 4.7" (DVD-5) SS/DL 4.7" (DVD-9) DS/SL 4.7" (DVD-10) DS/DL 4.7" (DVD-18)	CD-DA CD-R CD-RW MP-3/JPEG
Video Type	MPEG-2 Video Standard Decoding (MPEG-1 supported) Full-Screen Video Display of 720 x 576 (PAL) & 720 x 480 (NTSC) pixels 50 and 60 Hz frame refresh rates (PAL & NTSC) Digital bit-stream processing rate up to 108Mbits/sec Line resolution more than 500 lines	
Audio Type	Dolby Digital Decoding MPEG Multichannel Decoding LPCM	
Audio Output	<b>Digital Audio Outputs:</b> IEC 958 TOSLINK <b>Analog Outputs:</b> 24 bit /48, 44.1kHz down-sampling DAC	





KÜPPERSBUSCH HAUSGERÄTE AG  
Postfach 10 01 32, D-45801 Gelsenkirchen, Küppersbuschstraße 16, D-45883 Gelsenkirchen  
Telefon (02 09) 4 01-0, Telefax (02 09) 4 01-03 03  
[www.kueppersbusch.de](http://www.kueppersbusch.de)

Küppersbusch Ges.m.b.H.  
Eitnergasse 13, 1231 Wien, Telefon: 01/86680-0, Telefax: 01/8668072  
[www.kueppersbusch.at](http://www.kueppersbusch.at) – e-Mail: [verkauf@kueppersbusch.at](mailto:verkauf@kueppersbusch.at)

**Küppersbusch**

ALLERFEINSTE KÜCHENTECHNIK