

## On/off

Press once - activates the appliance.

## Heating Functions Assisted Cooking

Press once or twice - activates a Heating Function or an Assisted Cooking function. Press and hold for 3 seconds - activates or deactivates the oven lamp.

## Fast Heat Up

Press once - checks the temperature when the appliance operates. Press and hold for 3 seconds to activate or deactivate the Fast Heat Up function.

## Microwave function

Press once - activates the Microwave function. You can also use it after you deactivate the appliance.

## OK/Microwave Quick Start

Press once - activates Microwave Quick Start function. If you press it when Microwave operates it increases time by 30 sec.

## Home Key


Press once - goes back one level in the menu. Press and hold for 3 seconds to show the main menu.

## Sensor field







 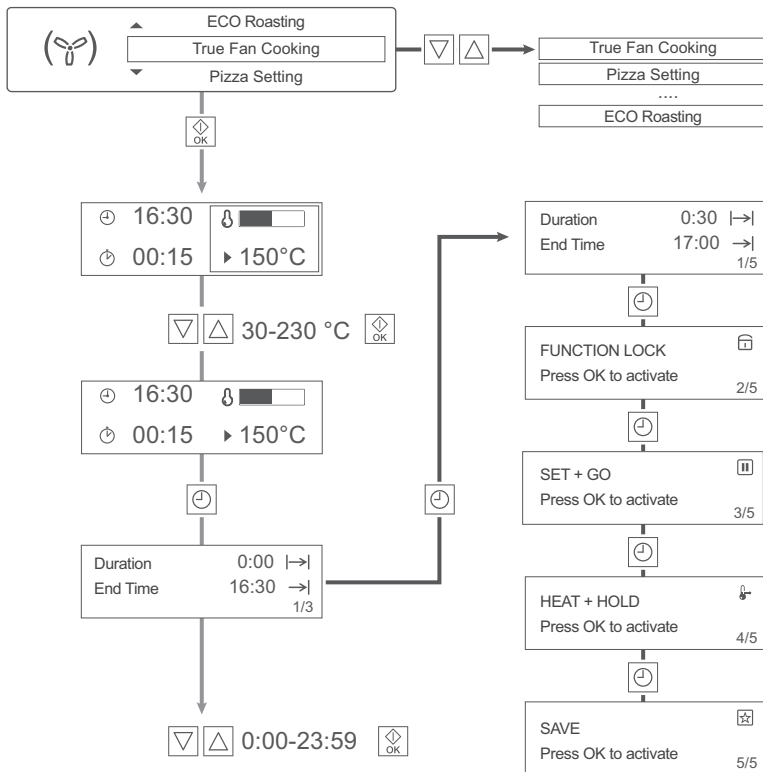


 
1. Display
2. On/off
3. Heating Functions or Assisted Cooking
4. Microwave function
5. Temperature selection
6. Navigation
7. OK sensor - confirms the selection
8. Home key - opens the main menu
9. Time and additional functions
10. Minute Minder

# Heating Functions

  Press once



## Heating Functions


-  True Fan Cooking
-  Pizza Setting
-  Slow Cooking
-  Conventional Cooking
-  Frozen Foods
-  Turbo Grilling
-  Fast Grilling
-  Grilling
-  Keep Warm
-  Defrost
-  Bottom Heat
-  Dough Proving
-  Bread Baking
-  Au Gratin
-  Preserving
-  Drying
-  Plate Warming
-  ECO Roasting



# Assisted Cooking



Press twice


 Desserts  
 Defrost  
 Cooking/Melting




Defrost  
 Cooking/Melting  
 ....  
 Desserts




Defrost Fish  
 Defrost Poultry  
 ....  
 Defrost Bread





 Back  
 Defrost Fish  
 Defrost Poultry





16:30   
 01:45 1.0 kg


 1-3 kg 

16:30   
 01:45 1.0 kg




Duration 3:00 |→|  
 End Time 19:30 →|  
 1/5


 0:00-23:59 

FUNCTION LOCK   
 Press OK to activate  
 2/5




SET + GO   
 Press OK to activate  
 3/5



HEAT + HOLD   
 Press OK to activate  
 4/5



SAVE   
 Press OK to activate  
 5/5





## Defrost

Defrost Fish  
Defrost Poultry  
Defrost Meat  
Defrost Bread

## Cooking/Melting

Fresh Vegetables  
Frozen Vegetables  
Braise Onions  
Potatoes in their Jacket  
Rice  
Melting Chocolate  
Melting Butter

## Pork/Veal

Roast Pork  
Roast Veal  
Ossobuco  
Veal Knuckle  
Meat loaf with herbs  
Swedish Festive Roast

## Beef/Game/Lamb

Braised meat  
Roast Game  
Rabbit  
Mustard Rabbit  
Wild Boar  
Roast Lamb  
Leg of Lamb

## Poultry

Chicken, whole  
Turkey, whole  
Chicken Legs  
Coq au Vin  
Chicken Wings  
Chicken, 2 half  
Stuffed Chicken  
Roast Duck with Orange  
Duck, whole  
Goose, whole  
Turkey, whole

## Fish

Fish fillet in Cream Sauce  
Steamed Fish  
Lemon sole rolls  
Fillet of Fish  
Fillet of Fish, frozen

## Cake

Sweet Tart  
Lemon Sponge Cake  
Carrot Cake  
Yeast Plait  
Ring Cake  
Brownies  
Muffins  
Biscuit  
Savarin Cake  
Streusel Cake

Swedish Cake  
Grandmas RoastApple Cake  
Almond Cake  
Apple Strudel, frozen  
Cheese Cake  
Fruit Cake  
Fruit Tart

## Pizza/Pie/Bread

Pizza  
Pizza American, frozen  
Pizza, chilled  
Pizza, frozen  
Pizza Snacks, frozen  
Onion Tart  
Quiche Lorraine  
Cheese Flan  
Cheese Pastry  
Pierogi  
White Bread  
Farmer Bread  
Rich Yeast Plait  
Bread/Rolls  
Bread/Rolls, frozen

## Casseroles/Gratins

Stuffed mushrooms  
Stuffed tomatoes  
Potato courgette gratin  
Cheese gratin  
Leek Casserole  
Stuffed cannelloni

Potato Gratin  
Vegetable spaetzle  
Pasta Gratin  
Beef Casserole  
Lasagne  
Lasagne/Cannelloni, frozen  
Moussaka  
Franconian Dumpling Pan  
French Fries  
Hash Browns  
Wedges/Croquettes

## Desserts

Apricot cream  
Amaretto-peaches